

LED PAR 56

7x15W

RGBWA+UV

6in1



User Manual
Instrukcja Obsługi

F7100338



(EN) THANK YOU FOR PURCHASING THIS FLASH-BUTRYM PRODUCT. BEFORE BEGINNING TO OPERATE THIS UNIT, PLEASE READ THE INSTRUCTIONS CAREFULLY TO ENSURE THE BEST POSSIBLE PERFORMANCE.

(PL) DZIĘKUJEMY ZA ZAKUP PRODUKTU FLASH-BUTRYM. PRZED ROZPOCZĘCIEM OBSŁUGI TEGO URZĄDZENIA NALEŻY UWAŻNIE PRZECZYTAĆ INSTRUKCJĘ, ABY ZAPEWNIĆ NAJLEPSZĄ MOŻLIWĄ WYDAJNOŚĆ.



1. INTRODUCTION

THANK YOU FOR PURCHASING **LED PAR 56 7X15W RGBWA+UV 6IN1**. FOR SAFETY REASONS AND TO ENSURE THE TROUBLE-FREE OPERATION, CAREFULLY READ THE INSTRUCTIONS.

2. SAFETY INFORMATION

- Please keep this User Manual for future consultation. If you sell the fixture to another user, be sure that they also receive this instruction booklet.
- Unpack and check carefully there is no transportation damage before using the fixture.
- Before operating, ensure that the voltage and frequency of power supply match the power requirements of the fixture.
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- Disconnect main power before servicing and maintenance.
- Use safety chain when fixes this fixture. Don't handle the fixture by taking its head only, but always by taking its base.
- Maximum ambient temperature is: 40°C Don't operate it where the temperature is higher than this.

- In the event of serious operating problem, stop using the fixture immediately. Never try to repair the fixture by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- Do not connect the device to any dimmer pack.
- Do not touch any wire during operation and there might be a hazard of electric shock.
- To prevent or reduce the risk of electrical shock or fire, do not expose the fixture to rain or moisture.
- The housing must be replaced if they are visibly damaged.
- Do not look directly at the LED light spot while the fixture is on.



WARNING



WARNING! Use 2 clamps to rig the fixture. Do not hang the fixture from only one clamp. Lock each clamp with both 1/4-turn fasteners. Fasteners are locked only when turned a full 90° clockwise.



WARNING! When clamping the fixture to a truss or other structure at any other angle than with the yoke hanging vertically downwards, use two clamps of half-coupler type. Do not use any type of clamp that does not completely encircle the structure when fastened.



WARNING! Position or shade the head so that the front lens will not be exposed to sunlight or any other strong light source from any angle - even for a few seconds. **See Figure 1.** The LED PAR 56 lens can focused the sun's rays, creating a potential fire hazard and causing damage.



IMPORTANT! Do not point strong light output from other fixtures at the LED PAR 56, as intense illumination can damaged the display.




Figure 1. Lenses can focused sunlight and strong light, presenting a risk of fire and damage to the fixture. Shield or shade the head if necessary.

3. PRODUCT INFORMATION

- Light Source: LED 7x15W (RGBWA+UV)
- Power consumption: 41W
- Power supply voltage: 110-240V, 50/60Hz AC
- Number of DMX channels: 6/10
- Control interface: 4 buttons
- Operating modes: DMX 512, Auto-running,
- Master/Slave, Sound active,
- IP Rating: IP20
- Housing made: ABS
- Cooling: Active
- AC IN/OUT: IEC - C14/IEC-C13
- 3-Pin XLR DMX Input/Output

4. INSTALLATION

The unit should be mounted via its screw holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. Always ensure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times of the unit's

weight. Also always use a safety cable that can hold 12 times of the weight of the unit when installing the fixture. The equipment must be fixed by professionals. And it must be fixed at a place where is out of the touch of people and has no one pass by or under it.



5. CONNECTION

The device is equipped with the following interfaces:


1. DMX (in/out): XLR 3(5)-pin socket
2. Power (in/out): IEC-C14/IEC-C13 socket

5.1 Connecting DMX signal

The connection is performed using cable with XLR-female -> XLR-Male plugs.

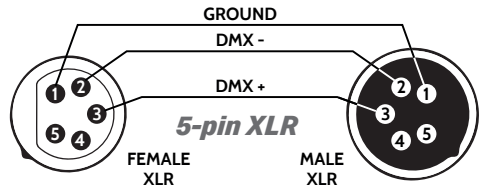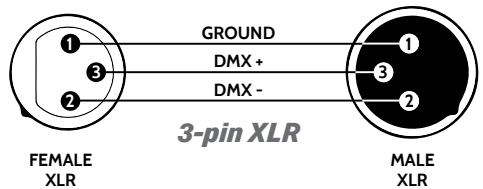

CAUTION! At the last fixture, the DMX signal has to be terminated with a terminator. Solder a 120Ω resistor between signal (-) and signal (+) into a XLR plug and plug it in the DMX output of the last fixture.

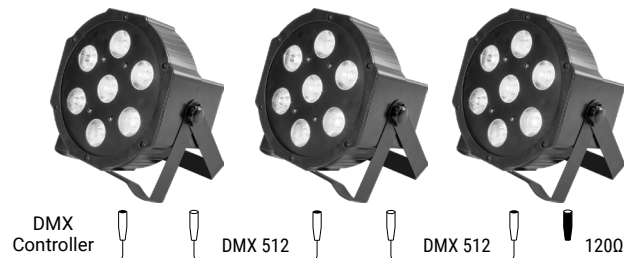

5.2 Voltage specification

Input Voltage	Total Power	Frequency
110-240V AC	41W	50/60Hz

5.3 Connecting power supply

The connection is performed using power cable with IEC-C14 connector (included). The device must be operated by qualified personnel.

Make sure that the power grid supply parameters are consistent with device parameters and limitations are not exceeded.




CAUTION! In the case of cable damage do not attempt to repair. Replacement or repair can be made only on the manufacturer or by a person with appropriate permissions.

Using lamp, the change rate of power voltage should be within $\pm 10\%$, if the voltage is too high, it will shorten the light's life; if it's not enough, the lamp will be dark. Please restart it after turning off light for 20 minutes until full-cooling. Frequent switching will reduce the life span of lamps and bulbs; intermittent using will improve the life of bulbs and lamps.

5.4 MENU and DISPLAY

DISPLAY

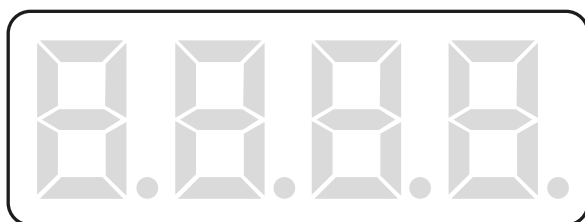

MENU



UP



DOWN



ENTER

6. DMX CHANNELS

6 CH Mode

CH	Function	Value	Description
1	Red	0-255	0-100% Dimmer, Linear, Dark->Bright
2	Green	0-255	0-100% Dimmer, Linear, Dark->Bright
3	Blue	0-255	0-100% Dimmer, Linear, Dark->Bright
4	White	0-255	0-100% Dimmer, Linear, Dark->Bright
5	Amber	0-255	0-100% Dimmer, Linear, Dark->Bright
6	UV	0-255	0-100% Dimmer, Linear, Dark->Bright

10 CH Mode

CH	Function	Value	Description
1	Dimmer	0-255	R-G-B Dimmer, Linear, Dark->Bright
2	Red	0-255	R Dimmer, Linear, Dark->Bright
3	Green	0-255	G Dimmer, Linear, Dark->Bright
4	Blue	0-255	B Dimmer, Linear, Dark->Bright
5	White	0-255	W Dimmer, Linear, Dark->Bright
6	Amber	0-255	A Dimmer, Linear, Dark->Bright
7	UV	0-255	UV Dimmer, Linear, Dark->Bright
8	Strobe	0-255	Strobe Slow->Fast
9	Macro	0-50 51-100 101-150 151-200 201-255	Dimmer mode Jump changing programm Gradual changing programm Pulsive changing programm Sound activated on
10	Speed		Speed from Slow->Fast Music activated sensitivity from Slow->Fast

OSTRZEŻENIE



UWAGA! Użyj 2 zacisków (1/4-fastener), aby przymocować urządzenie. Nie zawieszaj urządzenia tylko na jednym zacisku. Zablokuj każdy zacisk za pomocą łączników 1/4 obrotu. Łączniki są blokowane tylko po obrocie o pełne 90° zgodnie z ruchem wskazówek zegara.




UWAGA! Podczas mocowania urządzenia do kratownicy lub innej konstrukcji pod innym kątem niż z jarzmem zwisającym pionowo w dół, należy użyć dwóch zacisków typu Quick Half Coupler - (Hak). Nie używaj zacisków, które nie przylegają do konstrukcji po zamocowaniu.



UWAGA! Ustaw lub przyciemnij LED PAR 56, aby przednie soczewki nie była narażona na działanie promieni słonecznych lub innych silnych źródeł światła pod dowolnym kątem - nawet przez kilka sekund. **Patrz rysunek 1.** Soczewki LED PAR 56 mogą skupiać promienie słoneczne, tworząc potencjalne zagrożenie pożarowe i powodując uszkodzenia.



WAŻNE! Nie kieruj silnego strumienia świetlnego z innych urządzeń na LED PAR 56, ponieważ intensywne oświetlenie może uszkodzić wyświetlacz.



Rysunek 1. Soczewki mogą skupiać światło słoneczne i silne światło, stwarzając ryzyko pożaru i uszkodzenia urządzenia. W razie potrzeby należy osłonić lub zasłonić głowę.

1. WPROWADZENIE

DZIĘKUJEMY ZA ZAKUP URZĄDZENIA **LED PAR 56 7X15W RGBWA+UV 6IN1**. ZE WZGLĘDÓW BEZPIECZEŃSTWA ORAZ W CELU ZAPEWNIENIA BEZAWARYJNEJ PRACY URZĄDZENIA NALEŻY DOKŁADNIE ZAPOZNAĆ SIĘ Z INSTRUKCJĄ.

2. ZASADY BEZPIECZEŃSTWA

- Instalacja powinna być przeprowadzana przez wykwalifikowany personel, aby zminimalizować ryzyko przypadkowego porażenia prądem.
- Przed instalacją urządzenia należy odłączyć urządzenie od sieci.
- Przed podłączeniem urządzenia do sieci energetycznej należy sprawdzić, czy nie jest ono uszkodzone mechanicznie. Jeżeli widoczne są jakiegokolwiek ślady uszkodzenia należy niezwłocznie skontaktować się z dystrybutorem. Nie podłączać urządzenia do sieci elektrycznej.
- Nie należy korzystać z urządzenia w warunkach dużej wilgotności powietrza oraz w temperaturze powyżej 40°C
- Aby uniknąć uszkodzeń nie należy stosować rozpuszczalników organicznych do czyszczenia powłoki urządzenia.
- Urządzenie należy instalować na stabilnych konstrukcjach.
- Urządzenie powinno być zainstalowane w dobrze wentylowanym pomieszczeniu, w odległości co najmniej 150 cm od najbliższej powierzchni (ściany, sufitu itp). Jednocześnie należy upewnić się, że otwory wentylacyjne nie są zatkane oraz wentylatory działają poprawnie.



3. INFORMACJE O PRODUKCIE

- Źródło światła: LED 7x15W (RGBWA+UV)
- Pobór mocy: 41W
- Napięcie zasilania: 110-240V, 50/60Hz AC
- Ilość kanałów DMX: 6/10
- Sterowanie: 4 przyciski
- Tryby pracy: DMX 512, Auto-running, Master/ Salve, Sound active,
- Klasa IP: IP20
- Obudowa: ABS
- Chłodzenie: aktywne
- AC IN/OUT: IEC-C14/IEC-C13
- 3-pinowe wejście/wyjście XLR DMX
- Waga netto: 3,6 kg
- Wymiary: W(22)xS(32)xG(14,5)cm

4. INSTALACJA

Po wyjęciu urządzenia z opakowania należy sprawdzić czy nie zostało ono uszkodzone podczas transportu. Przed podłączeniem do sieci elektrycznej należy upewnić się, że urządzenie zamocowane jest stabilnie. Producent nie ponosi odpowiedzialności za uszkodzenia spowodowane niestabilnym zamocowaniem urządzenia.

Podczas korzystania z urządzenia należy zadbać o poprawne podłączenie go do sieci elektrycznej oraz prawidłowe uziemienie. Należy upewnić się, że parametry sieci elektrycznej są zgodne z wymaganiami urządzenia. Wszelkie czynności obejmujące obsługę w zakresie podłączania urządzenia do sieci elektrycznej powinny być wykonywane przez wykwalifikowany personel.


5. POŁĄCZENIA

Urządzenie wyposażone jest w następujące interfejsy:


1. DMX (wejście/wyjście) – złącza: XLR 3(5)-pin
2. Zasilanie (wejście/wyjście) – złącze: IEC-C14 / IEC-C13

5.1 Podłączenie sygnału DMX

Połączenie odbywa się przy użyciu przewodu z wtyczkami XLR-Żeński -> XLR-Męski

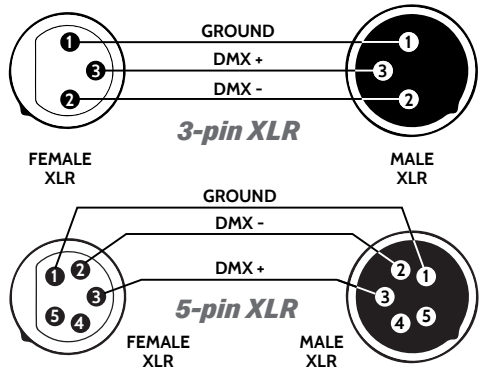

OSTROŻNIE! Na ostatnim urządzeniu sygnał DMX musi być zakończony terminatorem. Włutuj rezystor 120Ω między sygnał (-) a sygnał (+) do wtyczki XLR i podłącz go do wyjścia DMX ostatniego urządzenia.

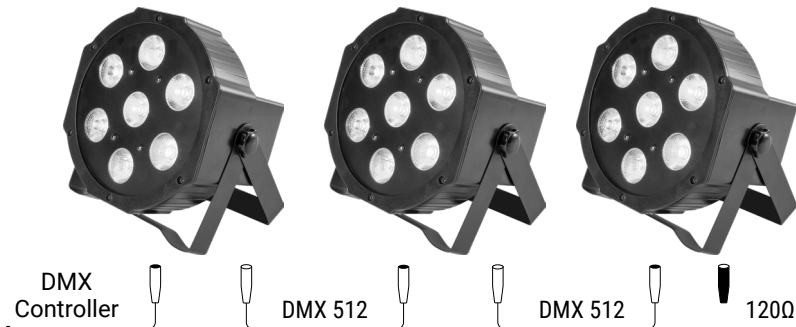

5.2 Specyfikacja zasilania

Napięcie Zasilania	Pobór Mocy	Częstotliwość zasilania
110-240V AC	41W	50/60Hz

5.3 Podłączenie zasilania

Połączenie odbywa się przy użyciu przewodu zakończonego z jednej strony wtyczką sieci elektrycznej i wtyczką typu IEC - C14 z drugiej strony (w zestawie).

Urządzenie musi być obsługiwane przez wykwalifikowany personel techniczny.

Należy upewnić się, że parametry zasilania sieci energetycznej są zgodne z parametrami urządzenia i nie zostają przekroczone ograniczenia dotyczące poboru energii elektrycznej z sieci.




UWAGA! W przypadku uszkodzenia przewodu nie należy dokonywać samodzielnej naprawy. Wymiana lub naprawa może być wykonana jedynie w serwisie producenta lub przez osobę z odpowiednimi uprawnieniami.

Używając lampy, szybkość zmiany napięcia zasilania powinna mieścić się w granicach $\pm 10\%$, jeśli napięcie jest zbyt wysokie, skróci to żywotność lampy; jeśli to nie wystarczy, lampa będzie ciemna. Uruchom ją ponownie po wyłączeniu światła na 20 minut, aż do pełnego schłodzenia. Częste przełączanie skróci żywotność lamp i żarówek; okresowe używanie poprawi żywotność żarówek i lamp.

5.4 MENU i WYŚWIETLACZ

WYŚWIETLACZ

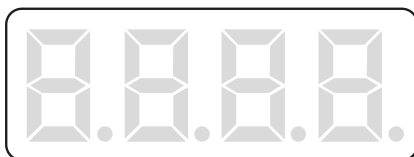

MENU



UP



DOWN



ENTER

6. LISTA KANAŁÓW DMX

Tryb 6 CH

CH	Funkcja	Wartość	Opis
1	Red	0-255	0-100% Dimmer, Linear, Dark->Bright
2	Green	0-255	0-100% Dimmer, Linear, Dark->Bright
3	Blue	0-255	0-100% Dimmer, Linear, Dark->Bright
4	White	0-255	0-100% Dimmer, Linear, Dark->Bright
5	Amber	0-255	0-100% Dimmer, Linear, Dark->Bright
6	UV	0-255	0-100% Dimmer, Linear, Dark->Bright

Tryb 10 CH

CH	Funkcja	Wartość	Opis
1	Dimmer	0-255	R-G-B Dimmer, Linear, Dark->Bright
2	Red	0-255	R Dimmer, Linear, Dark->Bright
3	Green	0-255	G Dimmer, Linear, Dark->Bright
4	Blue	0-255	B Dimmer, Linear, Dark->Bright
5	White	0-255	W Dimmer, Linear, Dark->Bright
6	Amber	0-255	A Dimmer, Linear, Dark->Bright
7	UV	0-255	UV Dimmer, Linear, Dark->Bright
8	Strobe	0-255	Strobe Slow->Fast
9	Macro	0-50 51-100 101-150 151-200 201-255	Dimmer mode Jump changing programm Gradual changing programm Pulsive changing programm Sound activated on
10	Speed		Speed from Slow->Fast Music activated sensitivity from Slow->Fast



F71005338

www.flash-butrym.pl